




CROWN DRAPERY VALANCE

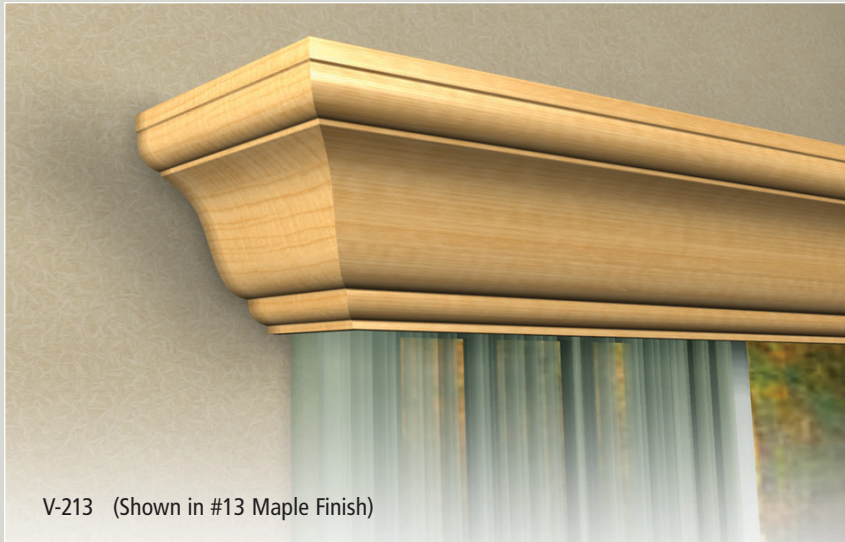

V-213 (Shown in #13 Maple Finish)



V-212 (Shown in #07 Medium Cherry Finish)



V-211 (Shown in #04 Medium Bird's Eye Maple Finish)

PRODUCT DESCRIPTION

Give windows a dramatic finish with SpecTrim® Crown Drapery Valances. They coordinate perfectly with SpecTrim® moldings and wainscot systems to give any décor a polished look.

SpecTrim® Valances are crafted using our renowned decorative PVC wood-like veneers which are heat and pressure laminated onto durable medium density fiberboard (MDF). The result is the high-end beauty of the world's finest woods without real-wood defects. Every surface is smooth and all colors are consistent, lot after lot.

SpecTrim® Valances are perfect for the hospitality industry because they provide the richness of wood without the expense or upkeep. And all SpecTrim® products are created without the use of trees, making them environmentally-friendly.

SpecTrim® Crown Drapery Valances are easy to install, won't warp, and offer a sophisticated way to hide curtain hardware.

Available in medium, large and extra large in all 15 standard SpecTrim® finishes.

ORDERING INFORMATION

Step 1

Select the Crown Valance Model

- V-213, Extra Large: 6-13/16" HT.
- V-212, Large: 5-5/8" HT.
- V-211, Medium: 3-5/8" HT.

Step 2

Provide the length and width of drapery including:

Dim-a.

Pocket distance from the wall to the inside face of the crown

Dim-b.

For valances to be finished on both ends, provide the pocket width between the inside finished ends

- For valances to be finished on one end only (when a valance butts into an adjacent wall), provide the inside pocket width between the inside face of the finished end return and the face of the ending wall

Step 3

For each valance, specify the finished ends as follows:

- Finished both ends
- Finished right end only
- Finished left end only


Step 4

Select the color number and color name from the 15 standard SpecTrim® finishes


- No minimum order required

INSTALLATION INSTRUCTIONS


- A. SpecTrim® Pre-finished Drapery Valances should be placed in the installation area 48 hours prior to installing to adjust to the climate of the room.
- B. Examine wall conditions before beginning installation of SpecTrim® Drapery Valances. Verify dimensions and acceptability of wall conditions. Do not proceed with installation of SpecTrim® products until unacceptable wall conditions have been corrected.

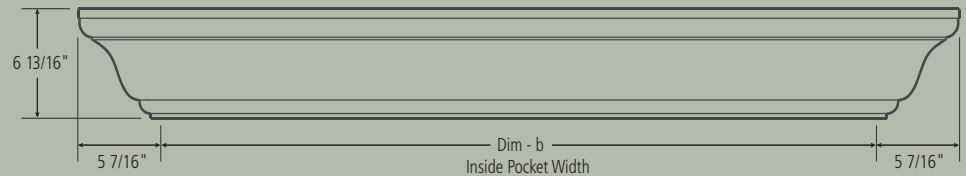

V-213
CROWN DRAPERY VALANCE – Extra Large

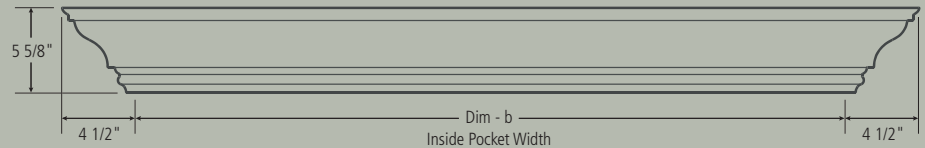

V-212
CROWN DRAPERY VALANCE – Large

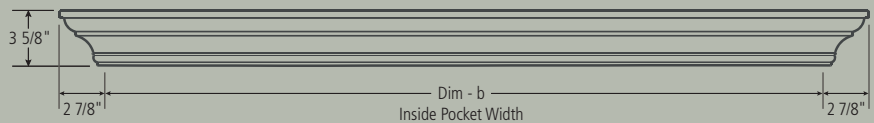

V-211
CROWN DRAPERY VALANCE – Medium

- C. Inspect each SpecTrim® Pre-finished Drapery Valance prior to installing. Do not install defective or damaged Valances.
- D. Install SpecTrim® Pre-finished Drapery Valance using a panel adhesive suitable for use on wood moldings to adhere to wall surfaces, and screws to attach to wall framing at ceiling. If Valance is to be installed lower than the Ceiling Ht., obtain a suitable valance mounting bracket and screw or anchor bracket to wall face using screws or anchors for your specific wall condition. Also screw-attach bracket to the plywood Valance top panel.
- E. Clean Pre-finished SpecTrim® Drapery Valances using denatured alcohol. Do not use abrasives on PVC surface.

F. Maintenance

Caulking

Use non-marking masking tape along both sides of a colored caulk joint to create a clean narrow bead.

Repairing Cuts in PVC

Superficial surface scratches should be cleaned with denatured alcohol and fill with matching wax putty. Excess wax is removed and smoothed using a soft cloth dipped in Naptha solvent.

Repairing Dents in Molding

Cut away damaged or misshapen surface and clean area to be patched. Use either wax putty or colored caulk to fill following the clean-up procedures listed above. If damage is too severe making molding either structurally or aesthetically unacceptable, remove and replace Valance.

SpecTrim®

A new age in building products

Spectrim Building Products, LLC
P.O. Box 826, Bensalem, PA 19020
(267) 223-1030 Toll free (800) 437-0557
Fax (215) 245-8704

rickb@spectrimbp.com

www.spectrimbp.com